



BL2000-HXJ-V9

CAN

BL2000-HXJ-V9

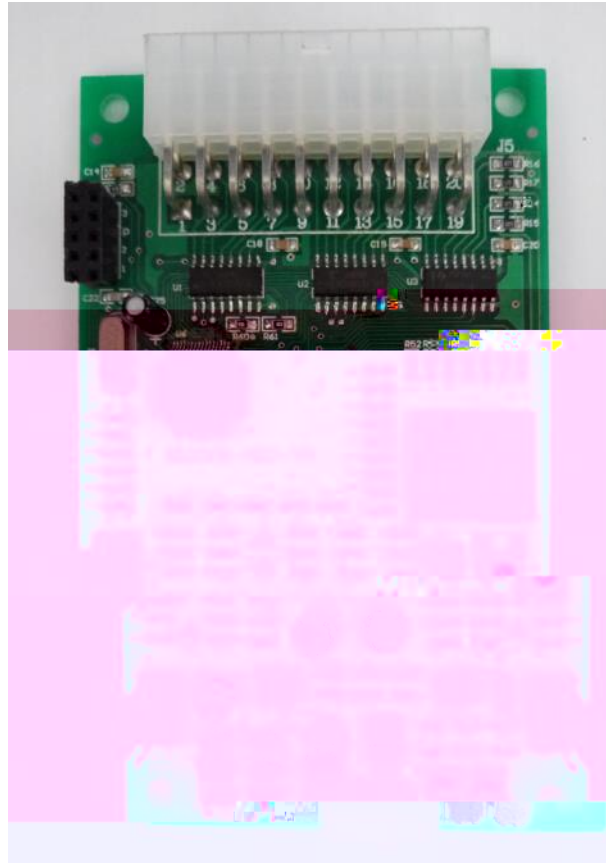

2.1 BL2000-HXJ-V9

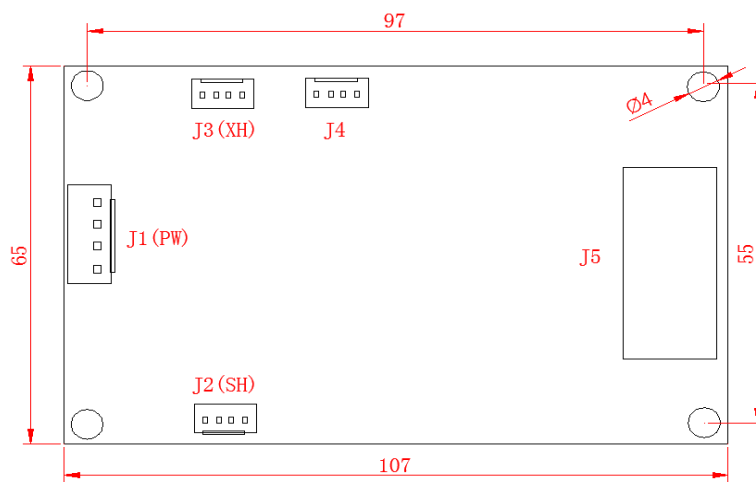

2.2 BL2000-HXJ-V9

mm

## 3.1 BL2000-HXJ-V9


J1	J1-1	24V		150mA
	J1-2	24V		
	J1-3	CAN H		
	J1-4	CAN L		
J2	J2-1			OC DC24V/20mA
	J2-2	24V		
	J2-3	24V		
	J2-4			
J3	J3-1			OC
	J3-2	24V		
	J3-3	24V		
	J3-4			
J4	J4-1	24V		
	J4-2			
	J4-3	24V		
	J4-4			
J5	BL2000-HXJ-V9		3.2	OC DC24V/20mA
S1	CAN			
AN				
JC				
JC EN/DS	JC EN DS			

## 3.2 BL2000-HXJ-V9

## J5

J5-1	24V			
J5-2	24V			
J5-3	5	BCD	1	5
J5-4	4	BCD	0	4
J5-5	3	BCD	3	3
J5-6	2	BCD	2	2
J5-7	1	BCD	1	1
J5-8	0	BCD	0	0
J5-9				
J5-10				
J5-11	[ 1]			
J5-12	[ 1]			
J5-13	[ 1]			
J5-14	[ 1]			
J5-15	[ 1]			
J5-16	[ 1]			
J5-17	[ 1]			
J5-18	[ 1]			
J5-19	[ 1]			
J5-20	[ 1]			
1				

BCD

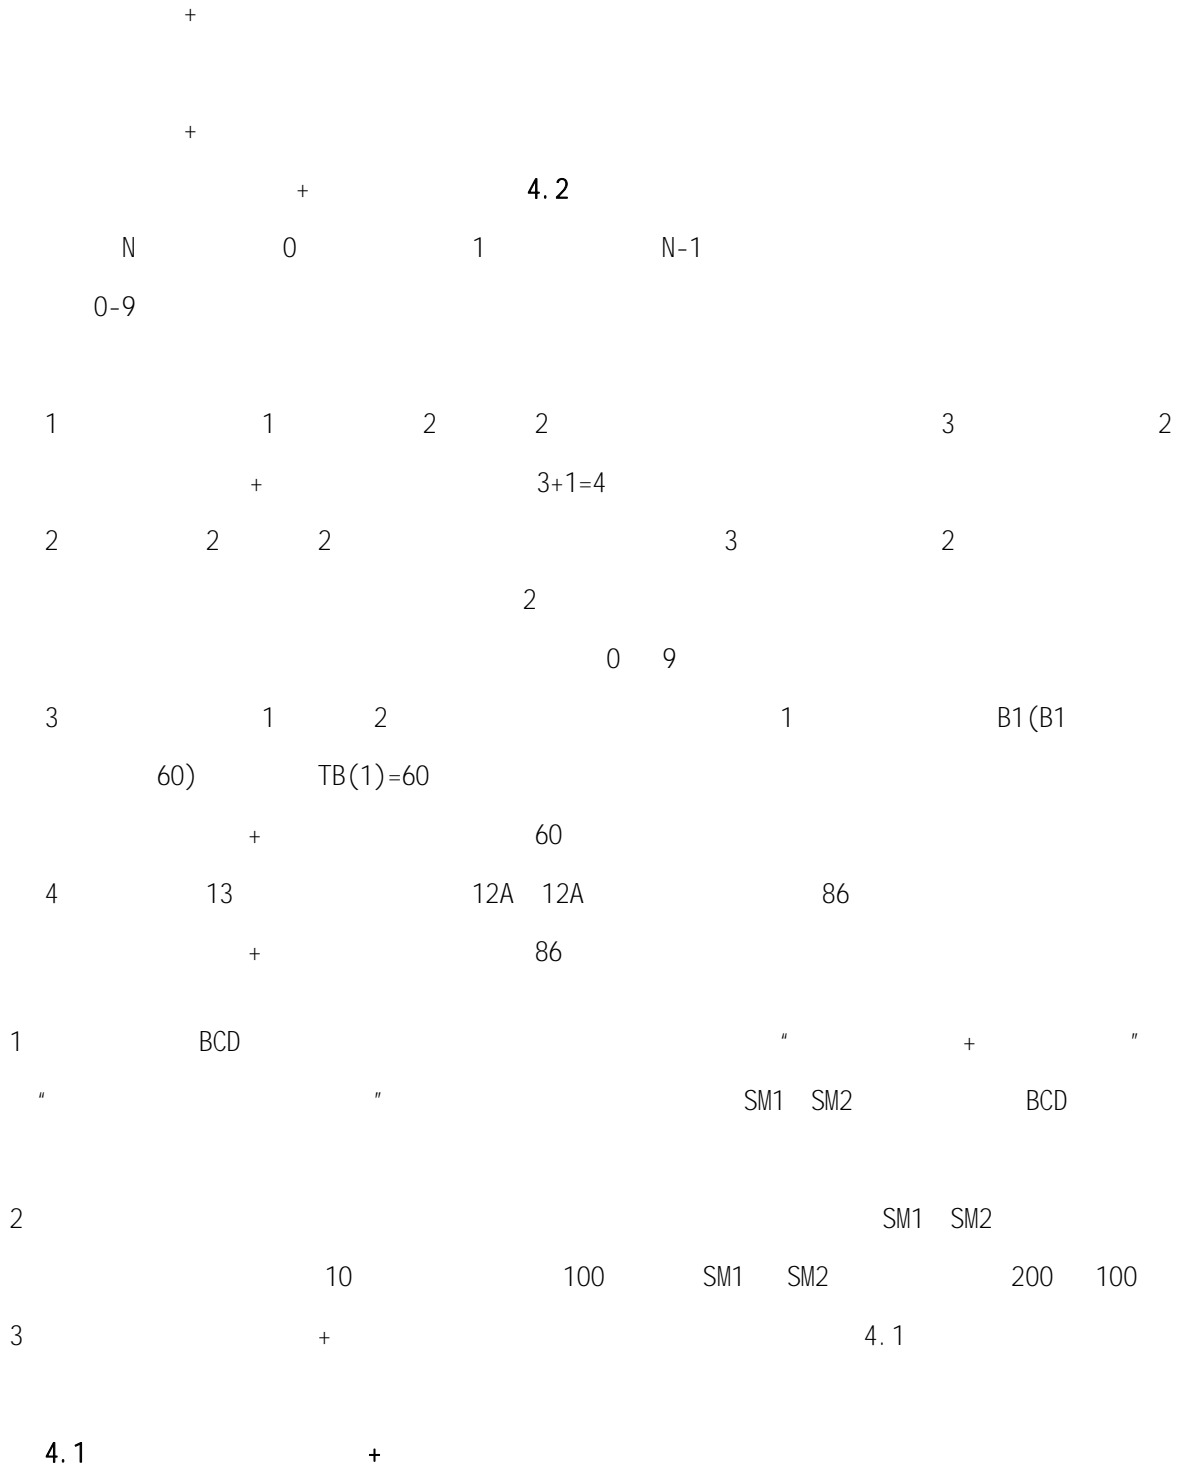

显示代码表															
代码	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
显示	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
代码	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
显示	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29
代码	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44
显示	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44
代码	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59
显示	45	46	47	48	...	-1	-2	-3	-4	-5	-6	-7	-8	-9	
代码	B1	B2	B3	B4	B5	B6	B7	B8	B9	B	G	M	M1	M2	M
显示	B1	B2	B3	B4	B5	B6	B7	B8	B9	B	G	M	M1	M2	M
代码	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89
显示	P	P1	P2	P3	R	R1	R2	R3	L	H	H1	H2	H3	3A	12
代码	90	91	92	93	94	95	96	97	98	99	100	101	102	103	104
显示	12B	13A	17A	17B	5A	G1	G2	G3	F		C1	C2	C3	C4	C
代码	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119
显示	D1	D2	D3	D4	D	1F	2F	3F	4F	5F	1C	2C	3C	4C	
代码	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134
显示	1B	2B	3B	4B	1A	2A	4A	CF	LB	E	A	UB	LG	UG	6A
代码	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149
显示	6B	7A	7B	5B	6C				SB	15A	13B	K	U	S	EC
代码	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164
显示	KG										GF	MZ	SR	19A	Z
代码	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179
显示	HP	AB	PH	AA	L1	L2	L3	PB		AG	BE	RF	1L	5L	1N
代码	194	195	196	197	198	199	200	201	202	203	204	205	206	207	208
显示	3M	4M	B1A	B2A	B3A	B4A	PM	14A	14B	AS	15B	16A	16B	22A	22B
代码	195	196	197	198	199	200	201	202	203	204	205	206	207	208	
显示	E1	E2	S1	S2	S3	E3	E4	49	50	51	52	53	54	55	
代码	210	211	212	213	214	215	216	217	218	219	220	221	222	223	
显示	57	58	59	60	61	62	63	64	P4	P5	LD	IC	S4	S5	
代码	225	226	227	228	229	230	231	232	233	234	235	236	237	238	
显示	LL	SC	9F	UF	UF	FF	33A	S6	S8	LP	1P	MR	PC	P6	
代码	240	241	242	243	244	245	246	247							
显示	PS	P9		P3A	P7A	P8A	P9A	AF							

5.1

00		12	
01		13	
02		14	
03		15	
04		16	
05		17	
06		18	
07		19	/ ** *
08		20	2
09			
10		21	+
11		22	

2

1 64

2


7.1

JC

EN

U

P

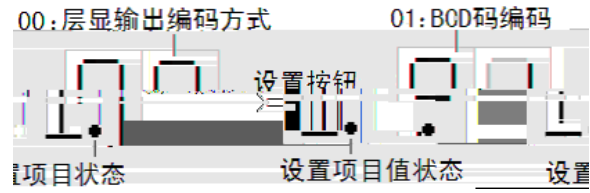

" / "

7.2

JC EN

7.3

1	00			
	0 -			
	1 - BCD			
	2 -			
			0	
2	01			
	0 -		+	
	1 -			
	2 -		+	
	3 -			+
			0	
3	02			
	0 9			
			1	
4	03			
5	04			
			2	3
6	05			
	0 -		1	
			0	
7	N			
N	11-20	J5-11	J5-20	
	0 29		5.1	